

1022K
МІКСЕР
МИКСЕР
MIXER



Dear Buyer!


We congratulate you on having bought the device of our product brand. We are sure that our devices will become essential and reliable assistance in your housekeeping.

Avoid extreme temperature changes. Rapid temperature change (e.g. when the unit is moved from freezing temperature to a warm room) may cause condensation inside the unit and a malfunction when it is switched on. In this case leave the unit at room temperature for at least 1.5 hours before switching it on.

If the unit has been in transit, leave it indoors for at least 1.5 hours before starting operation.

PARTS NAME

1. Control knob
2. Turbo button
3. Dough hook
4. Beater
5. Eject button
6. Housing

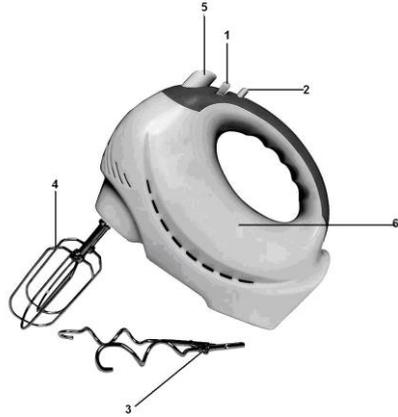

IMPORTANT SAFETY RECOMMENDATIONS:

1. Read the instructions for use care-fully before using your appliance for the first time.
2. Never leave the appliance with in reach of children without supervision.
3. Don't use outdoors. Your appliance is intend solely for domestic use and within the home.
4. Unplug your appliance as soon as you have finished using it and when you are cleaning it.
5. Don't use your appliance if it has been damaged. You should contact an approved service center.
6. Never place the appliance, the power cable or water in any other liquid.
7. Don't allow the power cable to hang down in reach of children.

8. If the power cable or the plug are damaged, don't use your appliance. To avoid any risk, these must be replaced by an approved service center.

9. Never touch the beaters and dough hooks. When the appliance is operating, don't allow long hair, scarves etc. to hang down over the accessories when they are in operation.

10. Unplug the appliance before handing it in any way (fitting and removed of accessories.)

11. Never fit accessories with different functions at the same time (Dough hooks and beater, etc.)

12. The power cable must never be close to or in contact with the hot parts of your appliance. Close to a heat source or resting on sharp edges.

13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.

14. If the supply cord is damaged, the manufacturer service agent must re-place it in order to avoid a hazard.

15. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

16. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

17. Children shall not play with the appliance.

18. These instructions are also available in an alternative format, e.g. on a website **kupava.net/documentation/**

Service life – 3 years.


SAVE THESE INSTRUCTIONS.

Before using your appliance for the first time, clean the various accessories of your appliance carefully.

HOW TO USE THE APPLIANCE **Beaters and dough hooks**

Attention!

The openings are different size. Insert the Dough Hook/Egg Beater with the **thicker spindle** into the **left** socket.

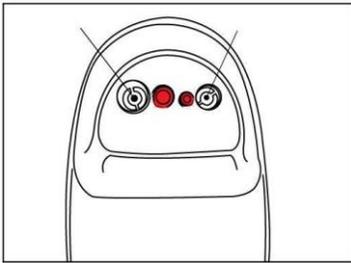

Insert the Dough Hook/Egg Beater with the **thinner spindle** into the **right** socket.

Do not insert them vice versa, otherwise it will cause the engine overheating and damage of the

appliance, and so the loss of warranty.

1. Insert the beaters or dough hooks until they are locked into place.
2. Plug in the appliance.
3. Depending on the quantity to be prepared, place the ingredients in an appropriate container.
4. Plunge the beaters or hooks into the container and start the appliance by turning the control knob to the right.
5. Turn the control knob to the right in "1"~ "5".
6. The appliance is equipped with a turbo button.
7. When you have finished using it, reset the control knob to position "0".
8. Unplug the appliance.
9. Eject the beaters or dough hooks by pushing the eject button.

MIXING GUIDE SPEED

1-2 For mixing dry ingredients with liquids, folding whipped egg whites and cream into mixtures, stirring gravies and sauces and mashing vegetables.

3-4 For mixing cake mixes, puddings or batters. For using the dough hooks when mixing dough or heavier cake mixes. For creaming together shorten-ing and sugar.

5 For whipping cream, evaporated or powdered milk, egg whites or whole eggs. For mixing minced meat or knead-ing heavy

dough.

TURBO mode - same as speed “5”.

CAUTION:

1. After 5 minutes continuous use, allow a 3-5 minutes rest before next use.

2. Do not operate more than 5 minutes at one time.

HOW TO CLEAN

1. Unplug the appliance.

2. Clean the body of the appliance using only a damp cloth.

3. Clean the beaters or dough hooks under running water or in the dishwasher. Rinse and dry.

4. Clean the attachments in a sink

CAUTION: The attachment is very sharp!

5. On completion of using your appliance it is strongly recommended that you clean the accessories immediately.

This will remove any clinging food from the accessories. Preventing bath drying out of the residue food.

Specifications

Power:	150 W
Rated voltage:	220-240 V
Rated frequency:	50 Hz
Rated current:	1.3 A

Set

MIXER	1
BEATERS	2
DOUGH HOOKS	2
INSTRUCTION MANUAL WITH WARRANTY BOOK	1
PACKAGE	1



ENVIRONMENT FRIENDLY. DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working



electrical equipment to an appropriate waste disposal center.

The manufacturer reserves the right to change the specification and design of goods.

